


# Rotari Rim Cover Installation Guide

# Rotari Rim Cover Installation Guide






Removing the Factory Rim Cover Carefully remove the factory rim cover from the wheel. Take precautions to avoid any damage to the rim.

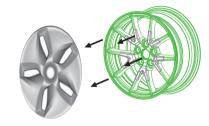



 Positioning the Vinyl Sticker (Optional)
Spray a fine mist of clean water onto the rim cover. This will help in repositioning the sticker if needed. Peel the backing off the vinyl sticker and apply the vinyl sticker carefully to the Rotari rim cover.






# Applying the Vinyl Sticker to the Rotari Rim Cover (Optional)

Prepare your Rotari rim cover for sticker application. If you have ordered the vinyl stickers, these will be used in the process. If not, skip to Step 5.





 Adjusting and Securing the Sticker (Optional)
Make any necessary adjustments to the sticker's
position for optimal alignment. Once satisfied,
use the included scraper to remove any water
or air bubbles trapped underneath the sticker.





Designed in California, USA





# **Rotari Rim Cover Installation Guide**

# **Rotari Rim Cover Installation Guide**

 




### **Applying the Rim Protectors**

Peel off the backing of the rim protectors and apply them directly onto the rim. Ensure all five rim protectors are securely attached.

IMPORTANT: Do not proceed with installing the Rotari rim cover until this step is fully completed.




Incorrect or improper installation may result in damage to your rims.



#### Aligning the Rim Cover

 Align the Rotari rim cover's clips with the corresponding spokes on the rim. Ensure each clip is correctly positioned.





### Securing the Rim Cover

Press down firmly on the rim cover until all clips are securely attached to the rim. A distinct clicking sound will indicate that each clip has properly engaged.





### Confirming Installation

Check all components to ensure they are securely in place. Your installation is now complete.



#### Rotari Rim Cover Safety and Usage Disclaimer

At Rotari, we prioritize the safety and satisfaction of our customers. We have noted concerns about other brands' rim covers becoming loose, and we have taken proactive measures to prevent such issues with our product.

To ensure secure attachment and optimal performance, our rim covers employ reinforced metal clips. These clips are designed to maintain their hold even under high temperatures, where plastic might otherwise weaken. As a result, both the installation and disassembly processes will require more force than tyoical plastic-only models.

Please carefully follow our provided instructions for installing and removing the Rotari Rim Covers. Failure to do so may result in damage to your vehicle, for which Rotari is not liable.

Moreover, please be aware that some scratches to the rim covers may be unavoidable after multiple installations and removals. This is a common occurrence, even with stock rim covers. Rest assured, our clips have undergone rigorous testing and are expected to last for at least 100 installations/removals.

If you believe our product has a quality issue or has caused excessive damage to your vehicle, we invite you to reach out to us immediately at info@rotariauto.com. We are committed to addressing your concerns promptly and ensuring your satisfaction with our products.



Distributed by: SIERLING INC. info@rotariauto.com www.rotariauto.com

# **KOTAK**:



